


## Sharing Remote Access / Configuring User Permissions

This guide will show you how to share remote access to your NVR/DVR and also how to configure User Account permissions.

First you will need to access the Main Menu by right clicking anywhere on the screen and then left clicking the Main Menu option.



Once you are logged in, you will select Network under settings.

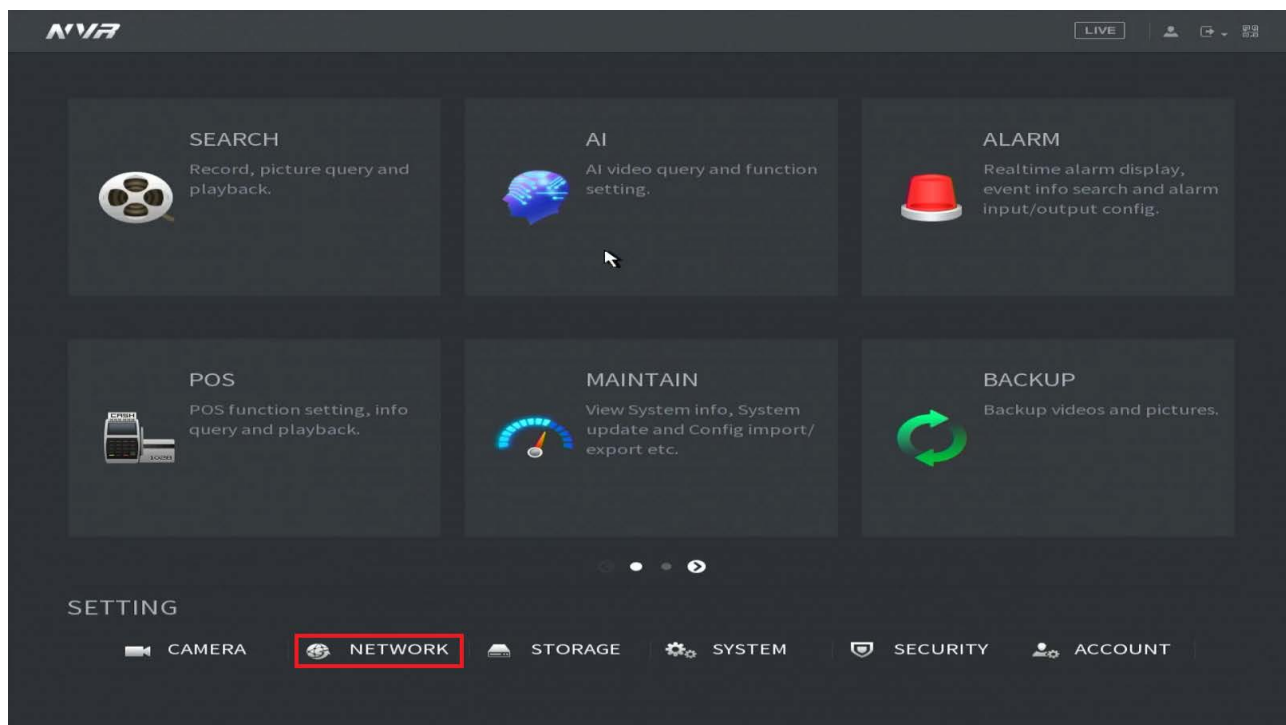


In the Network Settings you will select P2P on the left hand side.




You will find the Serial Number underneath of the QR code labeled Device SN. You can scan this QR code with SCS Pro or DMSS or you can manually enter the Serial Number. If you decide to manually enter the Serial number, keep in mind that no Serial Numbers will use the letter O, it will always be a zero.


To configure a new user account you will go into the Account Settings on the Main Menu.

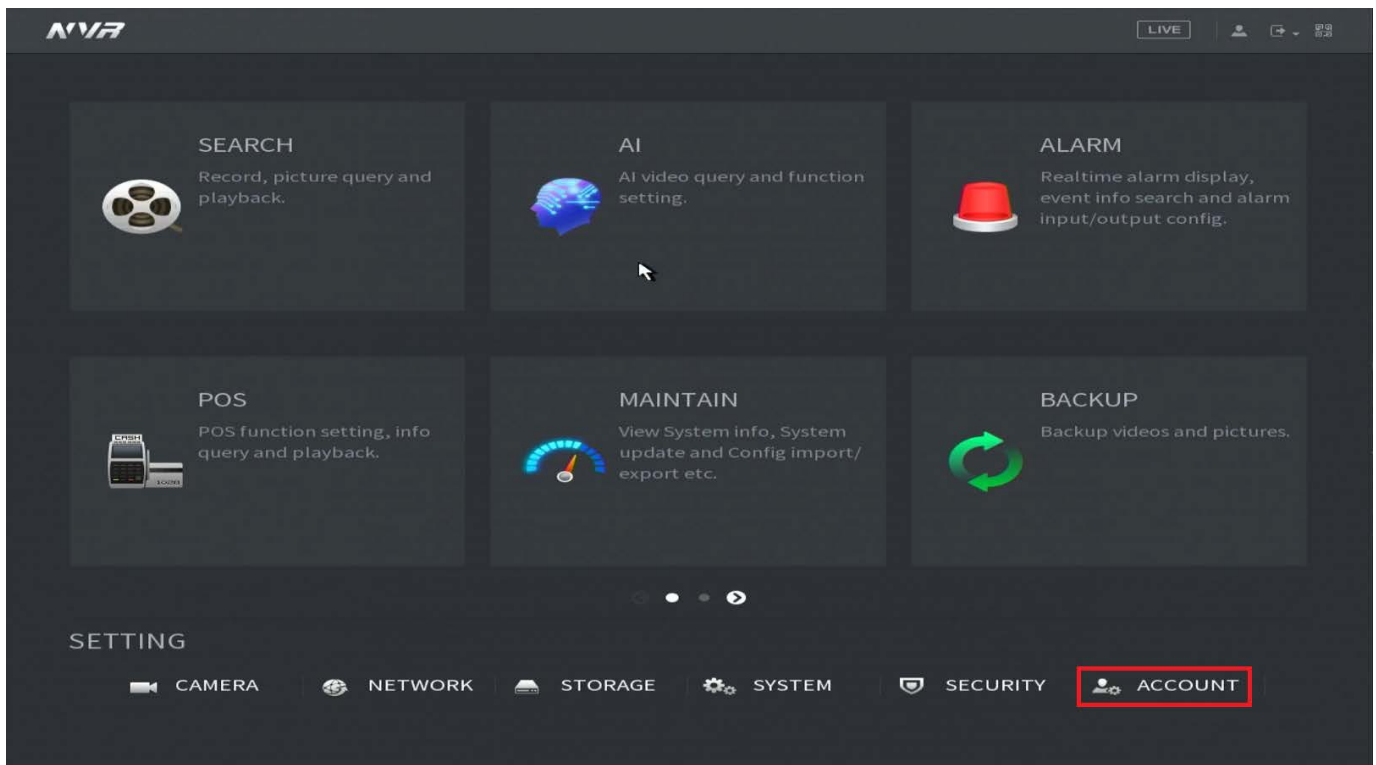

In the Account Settings you will go to the User tab and click Add at the bottom.

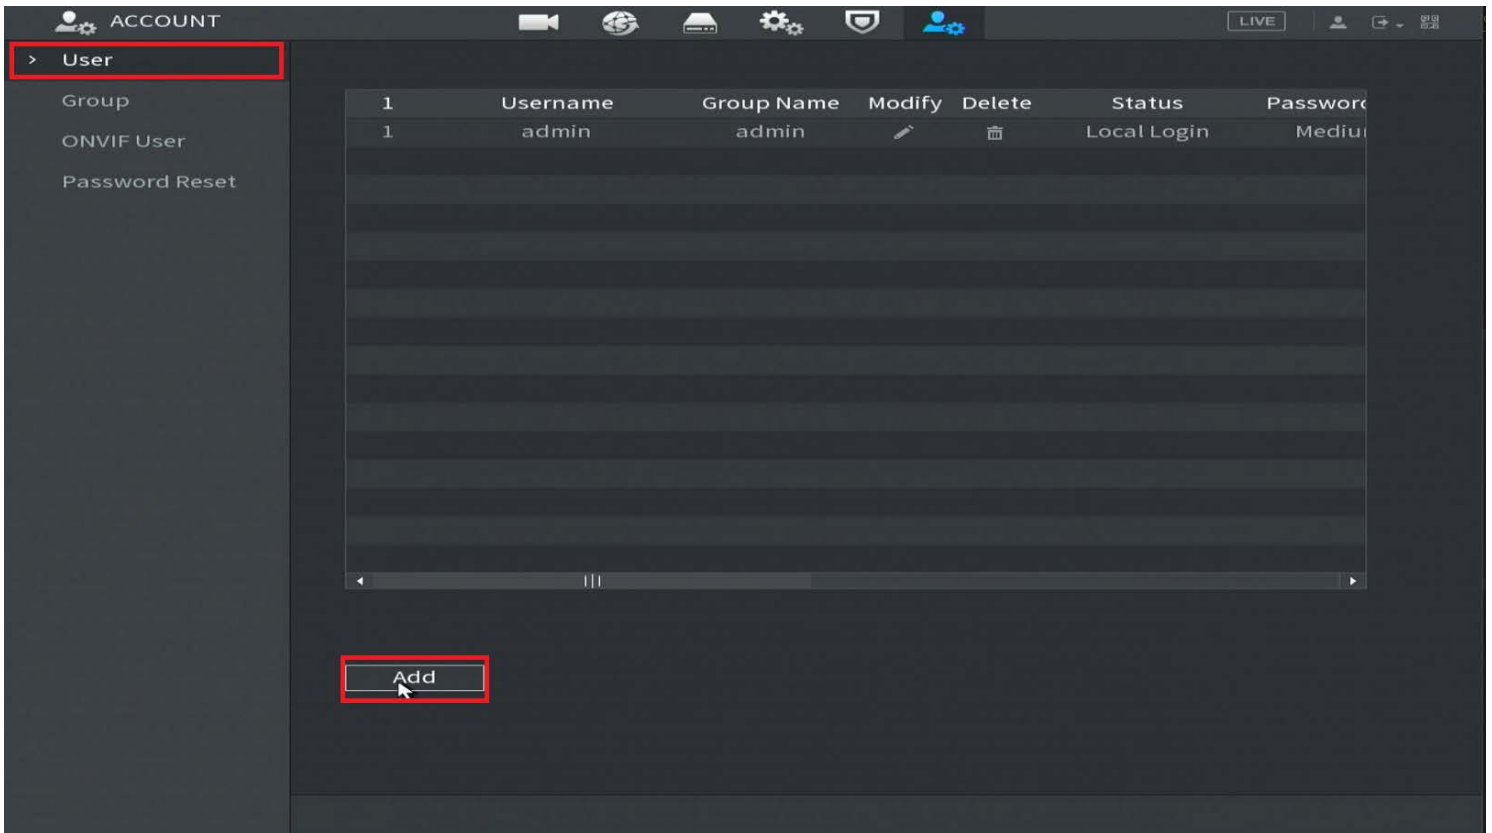

In the Add window you will create the Username, Password, Confirm the Password and then under Permissions you can customize what settings and cameras the User has access to.

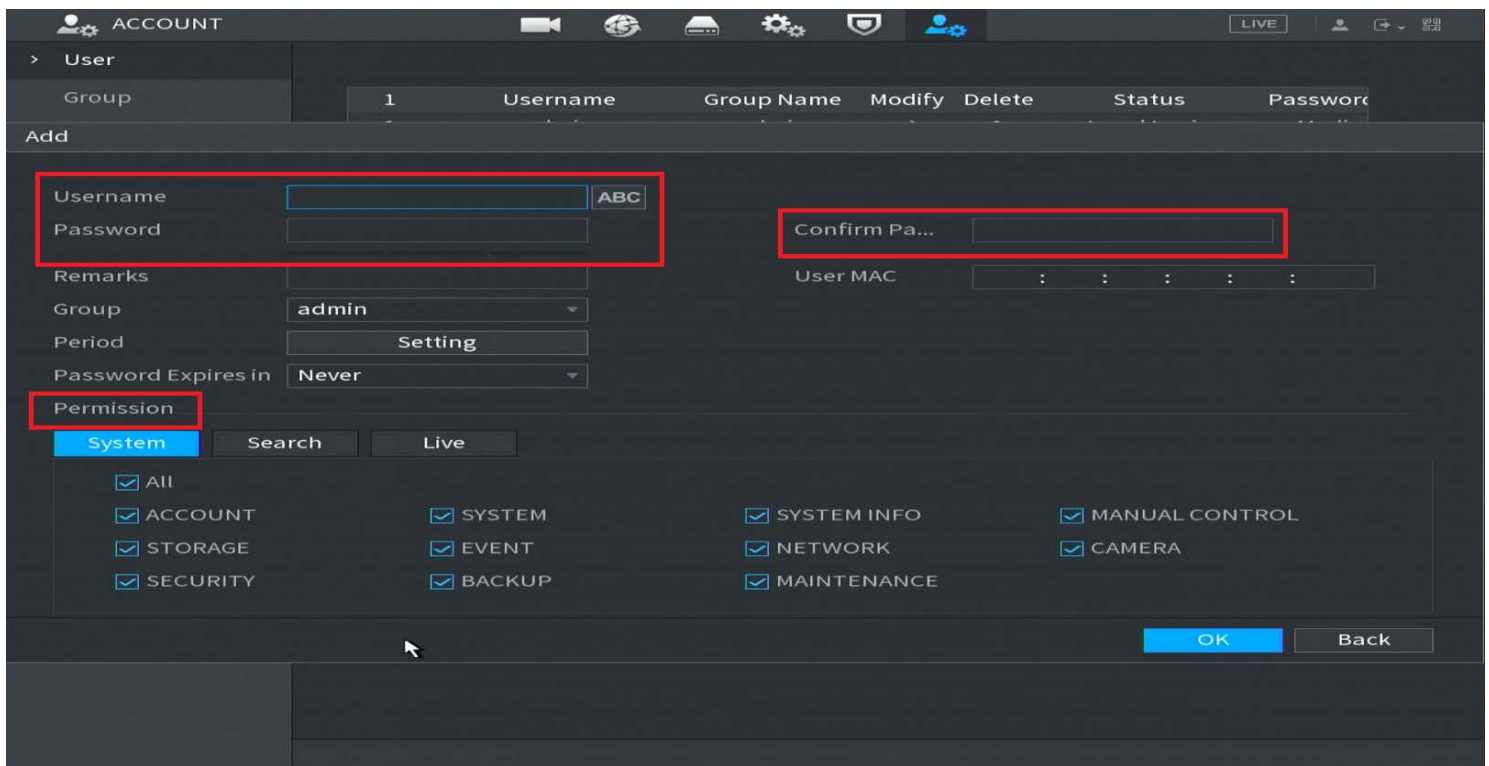

Any other questions or concerns please feel free to contact us at [support@cctvsecuritypros.com](mailto:support@cctvsecuritypros.com)