View the RTSP stream with VLC media player

Prerequisites

- VLC media player
- IP Camera online
- RTSP port open
- Camera Feed must be H.264 and cannot be H.265
- Camera Feed Bit Rate Should be 4096 or lower

Example URL

- rtsp://admin:admin123@192.168.1.13:554/unicast/c1/s1/live
- rtsp://admin:admin123@192.168.1.13:554/media/video1

Video Instructions

Step by Step Instructions

1. Download and install VLC.



2. Click Media—Open Network Stream.

Media		Playback	Audio	Video	Subtitle	Tools	1
Þ	0	pen File	Ctrl+0				
Þ	Open Multiple Files				Ctrl+Shift+O		
	0	pen Folder	Ctrl+F				
0	0	pen Disc	Ctrl+D				
	0	pen Network	Ctrl+N				
	Open Capture Device			Ctrl+C			
	Open Location from clipboard			Ctrl+V			
	Open Recent Media				•	8	
	Save Playlist to File				Ctrl+Y		
	Convert / Save				Ctrl+R		
((•))	Stream			Ctrl+S			
	Quit at the end of playlist					-	
	Quit			Ctrl+Q			



3. Input RTSP URL in Network Tab.



4. Click Play button, then the video will display.

:		
	H4 E H4	(1) 100%

About the URL of the RTSP, please see the explanation as follows.

URL Syntax

NVR: rtsp:// [USER] : [PASS] @ [ADDRESS] : [RTSP PORT] /unicast/c [CH] /s[STREAM TYPE]/live IPC: rtsp:// [USER] : [PASS] @ [ADDRESS] : [RTSP PORT] /media/video[STREAM TYPE]

- USER a valid user's username.
- PASS user's password
- ADDRESS the IP address of the IP Camera or NVR.
- RTSP PORT the default port is 554.
- CH the channel number. It starts from 1.
- STREAM TYPE main stream is 0, substream 1 is 1, substream 2 is 2.

For example, we request the sub stream 1 of channel 1,the URL is: rtsp://admin:admin123@192.168.1.13:554/unicast/c1/s1/live.

The IP Camera supports both TCP and UDP transmission forms. It also supplies basic authentication and digest authentication ways. The authentication process is similar with 3.2 Authentication.

For the RTSP port, it is 554 in default, If it was changed, please change the port number in the RTSP URL.

VISION . Live View Playback Setup Smart ٠ -Port Client * System \ge 80 HTTP Port Camera 8 443 HTTPS Port Hard Disk * 554 RTSP Port Alarm 8 rtsp://<ip>:<port>/unicast/c<channel number>/s<stream type>/live Alert \$ RTSP URL Format <channel number>: 1-n <stream type>: 0(main stream) or 1(sub stream) Network ~ Note: You need to relog in after modifying the HTTP port. TCP/IP PPPoE HTTP Redirect Port 8081 P2P RTSP Redirect Port 8082 DDNS Note: HTTP Redirect Port and RTSP Redirect Port are used to access an IP camera in a WAN. Port Save Port Mapping Email Multicast FTP Platform 8 User ~ Maintenance *

For the IPC, you can see the RTSP port in the Web page: